

INSTALLATION DIAGRAMS & INSTRUCTIONS FOR 806-601 SERIES


IMPORTANT

Cut wire loop before installation. This will enable the meter.

Find a convenient mounting location. DO NOT mount over magnetic surfaces. DO NOT mount meter where surface temperature exceeds 125 degrees F. As a general guideline, if you can place your hand on the mounting surface without discomfort while equipment is at full operating temperature, then it will be suitable to mount meter in that location.


1. Use drill template (Fig. 1) to locate mounting holes. DO NOT DRILL INTO GAS TANKS OR ENGINE CRANKCASE; if in doubt, contact your dealer.

FIG. 1 Back Side of Meter

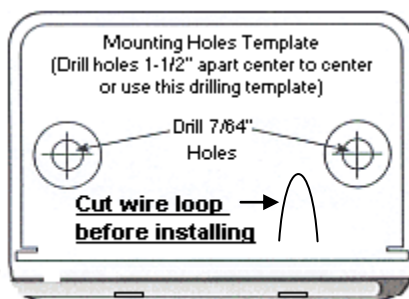

2.125" L x 1.490" W x 0.550" D

2. Mounting will determine sensitivity of the meter. In most applications the appropriate mounting sensitivity can be easily achieved. See Fig. 2 for mounting sensitivity options.

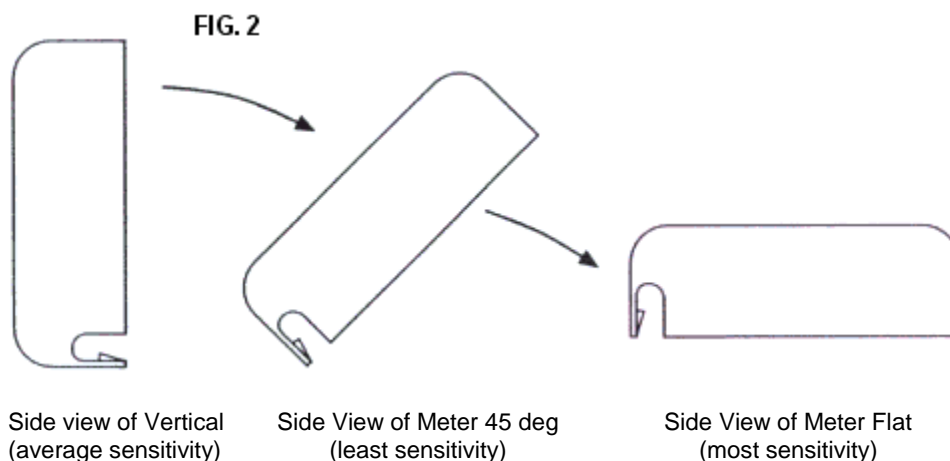

NOTE: To insure quality control, factory testing is performed prior to shipment which could accumulate up to 0.2 hours on the display. This is normal and is NOT a problem with the meter.